



KUNDENDIENSTMITTEILUNG

BETRIFFT: Working time of Haflinger transmission repair

Seite 51
Mitteilung 20
Datum September 1969
KD/KO/BR

8. Disconnect carburettor linkage and chok cable .
9. Take off engine mounts leave rear cover at the crossmember .
10. Take rubber plug out at the front side of the engine compartment , bend shee metal underneath of the holes approximately 3 mm (1/8 of an inch) away to avoid platform to hooked up on the threaded bolt of shockabsorber mounts, while lifting it up.
11. Put disconnected wire ends out of the engine compartment on the platform.

Underside

1. Remove sparewheel.
2. Front underguard: Remove four bolts from the rubber suspension .
3. Unhook hand brake linkage at the adjusting screw . After locknut is taken off, one person pulls hand brake lever fully, as a second man keeps holding the hand brake linkage in this position, whereupon the other person releases the hand brake lever again. By this means, removal of the adjusting nut is made easier . Loosen brake cable braket from chassis. Unhook brake cable at the rear wheels pull it out of the mounts, leave it at the platform.
4. Rear underguard: Remove the two nuts from the flange of central and both rear securing bolts, take off underguard.
5. Rear thrust brace: pull out split pin, remove (crown) nut and cone .
6. Unhook linkage leading to the differential lock at the gearchange housing (pull out safety pin).
- 6a. Undo heater tube from the platform, pull both heater hoses from the muffler box. Disconnect mufflerbox on the rear attached to the lateral engine cover plate muffler stays with the engine . Lift platform up and secure it by placing a supporting base, approximately 150 mm (6 inches) high. (a piece of hardwood etc), between platform and cross member (see fig. 1).

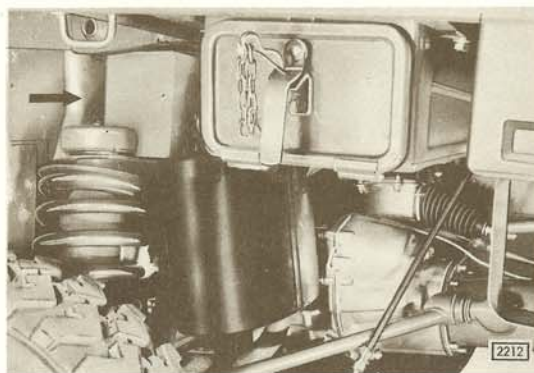


fig. 1

Unterschrift
z. Ktn.gen.

Steyr-Daimler-Puch-Aktiengesellschaft, Werke Graz

Haflinger-Haflinger-Haflinger-Haflinger-Haflinger-Haflinger-Haflinger-Haflinger-Haflinger-Haflinger

